


Additional Installation Guide

Indoor unit dimensions

If the unit dimension(WxDxH) match the contents in the diagram, please follow below instruction.

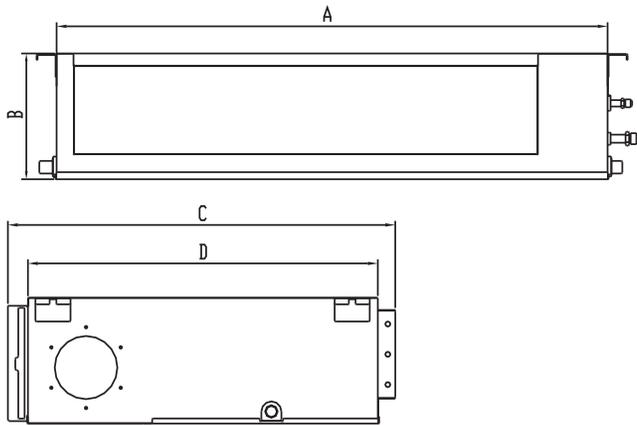

Model	Outline dimension(inch/mm)			
	A	B	C	D
Model-A	27.6/700	7.9/200	19.9/506	17.7/450
Model-B	34.6/880	8.3/210	26.5/674	23.6/600

Model-A

Horizontal installation

1.1 With external pump

Cut both ends of the rubber hose into a straight one, use it to connect the drain Connector A and the external pump and safety it with clamps on both ends. Then connect the drainpipe to the Connector B.(See Fig. 1)

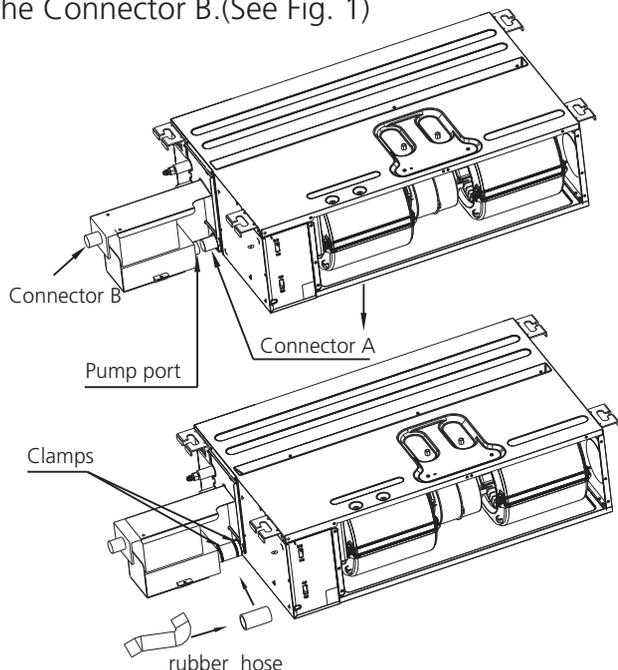


Fig. 1

Vertical installation

2.1 No need pump (Disable pump)

The pump must be disabled while the unit is installed vertically or the pump assembly is removed from its original position. Open the cover of E-Parts Box assembly, unplug the "PUMP" pin to disable the pump function, and short connect "CN5" plug to disable the water level sensor. (See Fig. 2)

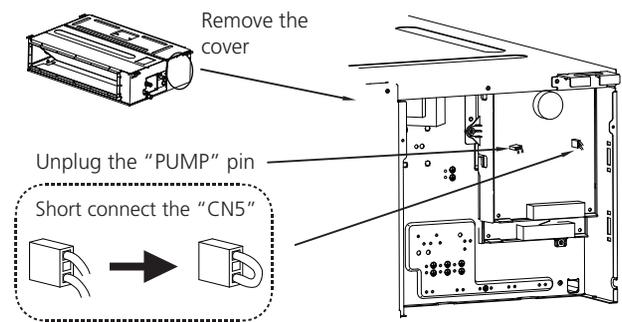


Fig. 2

2.2 Drain pipe connecting

When installed vertically (up flow), the pump must be disabled firstly. Follow the 2.1 (Fig.2) steps to disable the pump. For the unit with external pump, the whole pump assembly can be removed. Then connect the drainpipe to drain connector. (See Fig.3)

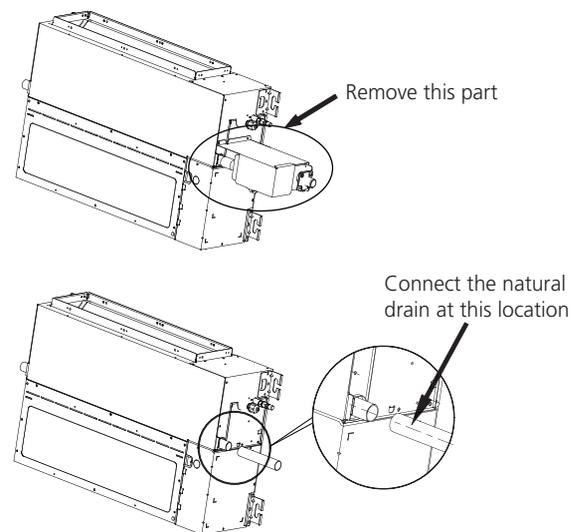


Fig. 3

Model-B

Horizontal installation

1.1 With external pump

Drain connector A, B & C are covered with caps originally. Take the cap on drain connector B off, connect the external pump to drain connector B using a hose & two hoseclamps. Then connect the drainpipe to the connector D. (See Fig. 4) Plug the external pump to the "PUMP" pin and the water level sensor to the "CN5" to enable the pump. (See Fig.5)

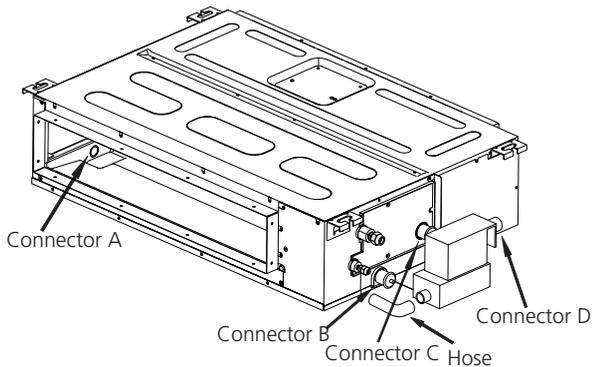


Fig. 4

Vertical installation

2.1 No need pump (Disable pump)

The pump must be disabled while the unit is installed vertically or the pump assembly is removed from its original position. Open the cover of E-Parts Box assembly, unplug the "PUMP" pin to disable the pump function, and short connect "CN5" plug to disable the water level sensor. (See Fig. 5)

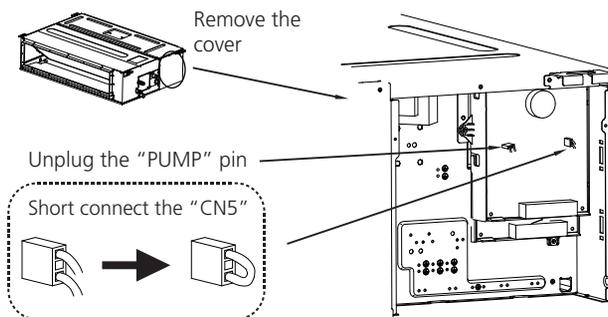


Fig. 5

2.2 Drain pipe connecting

When installed vertically (up flow), the pump must be disabled firstly. Follow the 2.1 (Fig.5) steps to disable the pump. For the unit with external pump, the whole pump assembly can be removed. Then take the cap on drain connector off and connect the drainpipe to drain connector. (See Fig.6, Fig.7 and Fig.8)

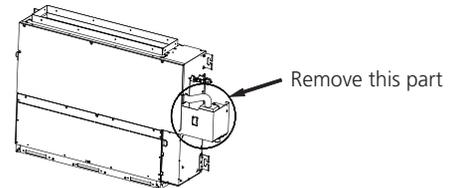


Fig. 6

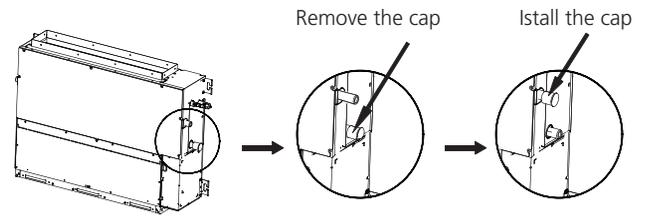


Fig. 7

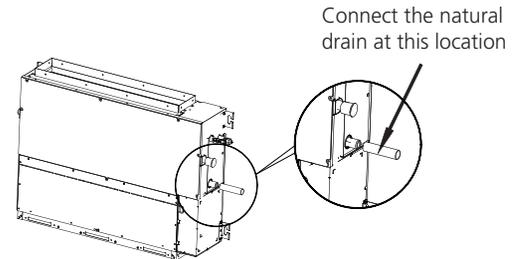


Fig. 8

NOTE:

Please contact professional technical after-sales service if the pump needs to be replaced.

QSTIWP-004AEN
16123000A31871
20240412

此面无需印刷

技术要求:

1. 双胶纸(说明书)80g非E项目大度
2. 尺寸: A4
3. 颜色: 黑白
4. 注意: 排版时注意页码数字都是靠外面的